 
1		No.	Quantity
50X1.5MM	0 0	1	4
1430MM			
38x1.20mm	0 • •	2	5
1920mm			
25X0.8MM		4	1
1495MM			
25X0.8MM		5	1
1495MM			
50X1.5MM	0	8	2
2090MM			
25x1.0MM		19	1
1490MM			
37X1.2MM		23	2
1930MM	U U		
140 ° Four-way connector		12	1
54-42mm			
	5		
110 ° Four-way connector	n	13	2
54-42mm			
Elet formular compacts in 5.4.42		1.4	2
Flat fourway connector 54-42mm		14	2
Foot base for sidewall		17	2
	0 0		


Supper pipe peg		2
8x300mm		2
4x180mm		6
bungee		30
D RING M6X50MM		10
D RING M8X70MM		10
M6x35 screw with wing nut		1
M6x30 screw with wing nut		4
Allan Key		1

bracket		2
roof		1
sidewall		2

Select a flat ground for the tent, unpack the carton and check all the parts including tubes, tent and accessories... etc. are present as same as list.


Assemble the framework of rooftop by joining the portion (12.13.14.) together with poles (1.2.3). Note: use 6x50mm and 8x70mm D ring to connect the pipes and connectors




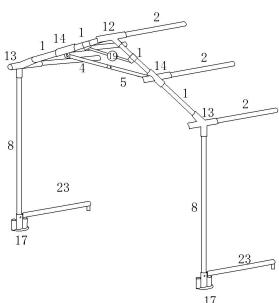


Ш

Attach the top strengthen pipe No.4,5 and No19, use M6x30mm screw +wing nut as below picture shows.

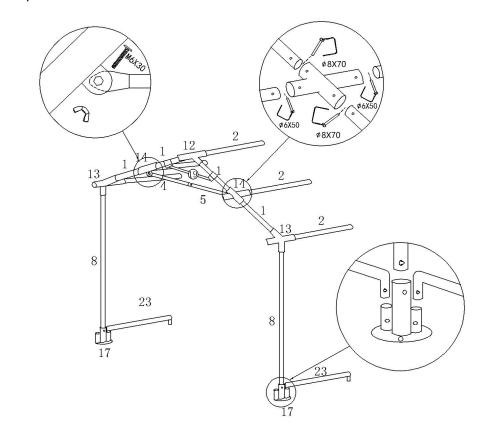

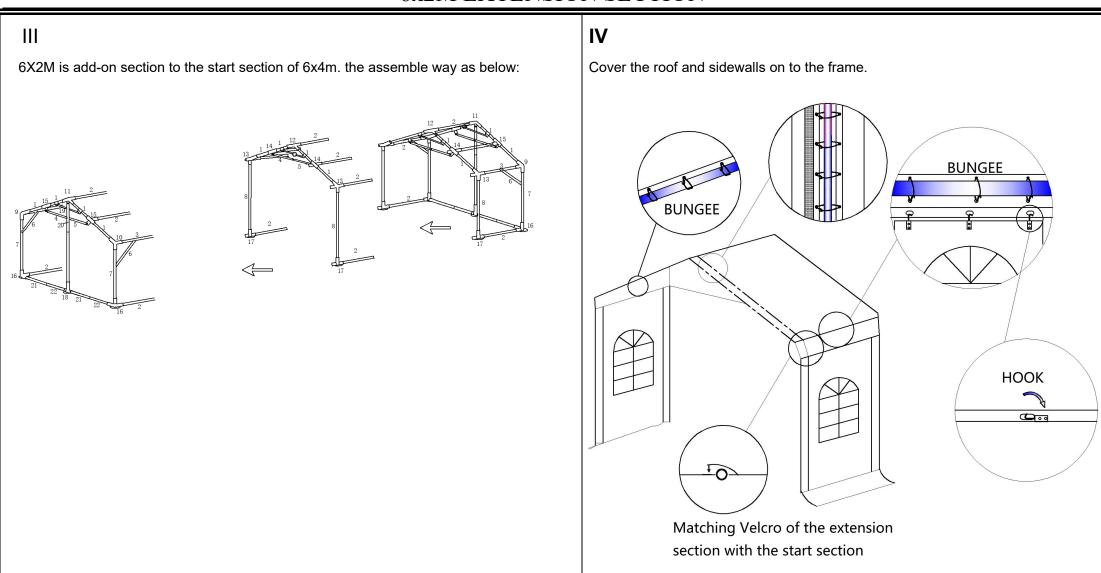

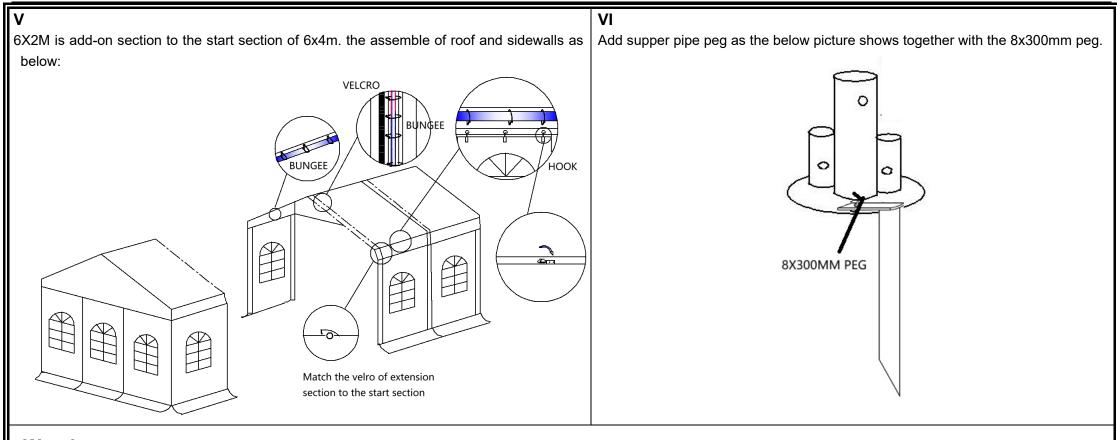

<u>Warning</u>

- 1. In order to avoid being rusted by air ,oil is covered on the surface of the pipes ,before set up the tent ,please remove the oil carefully frist to keep the cover clean.
- 2. Take note that the tent needs to be handled carefully to avoid damage.
- 3. Do not force the frame as they may be damage in the process.
- 4. Tents are meant as temporary shelter and must be evacuated under extreme weather conditions.

Please select a suitable site for the tent to avoid the damage to underground sprinkler systems, water, gas or electrical lines.